

## **Lubricator Assembly**


1500 Series

# **Parts Information**





## Lubricator Assembly 1500 Series L362X1-XXX Exploded Diagram

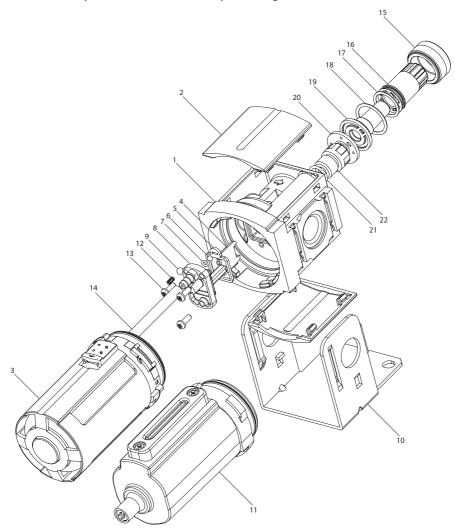


(Dwg. 15321938)

2 15301864\_D

## Lubricator Assembly 1500 Series L362X1-XXX Parts List

Item	Part Description	Material	Part Number	
1	Lubricator Body			
	1/4" NPT (L36221-XXX)	- Aluminum		
	3/8" NPT (L36231-XXX)			
	1/4" BSP (L362B1-XXX)			
	3/8" BSP (L362C1-XXX)			
2	Cover	Nylon		
3	Poly Bowl			
4	Damper	Nitrile		
5	Damper Guide Gasket	Nitrile		
6	Steel Ball (Small)	Steel		
7	Check Ball O-Ring	Nitrile		
8	Damper Guide	Acetal		
9	Steel Ball (Large)	Steel		
10	C-Bracket	steer	104408	
11	Metal Bowl			
12	Spring	Stainless Steel		
13	Bolt	Steel		
14	Siphon Tube	Urethane		
15	Sight Dome Housing	Nodes		
16	Outer Sight Dome	Nylon		
17	Outer Sight Dome O-Ring	Nitrile		
18	Inner Sight Dome O-Ring	Nitrile		
19	Inner Sight Dome	Nylon		
20	Nozzle Sheet	Nitrile		
21	Fill Cap O-Ring	Nitriie		
22	Fill Cap	Acetal		
	Service Kit (Includes Items 4, 5, 6, 7, 8, 15, 16, 17, 18, 19, 21, 22 and Bowl O-Ring)		104441	
	Sight Dome Repair Kit (Includes Items 15, 16, 17, 18, 19)		104442	

## Poly Bowl Assembly 1500 Series L362X1-XXX Exploded Diagram

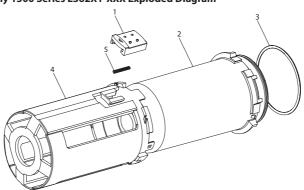


(Dwg. 15300072)

## Poly Bowl Assembly 1500 Series L362X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Lock Button	Nylon	
2	Poly Bowl (Includes Items 1, 3, 4 and 5)	Polycarbonate	104439
3	Bowl O-Ring	Nitrile	
4	Bowl Guard	Nylon	
5	Lock Button Spring	Stainless Steel	

#### Metal Bowl Assembly 1500 Series L362X1-XXX Exploded Diagram

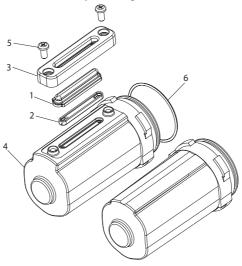

(Dwg. 15300080)

#### Metal Bowl Assembly 1500 Series L362X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Sight Glass	Nylon	
2	Sight Glass Gasket	Nitrile	
3	Plate Cover	Aluminum	
4	Metal Bowl (Includes Item 6)		
	with Sight Glass (Includes Items 1, 2, 3, 5)	Aluminum	104440
	w/o Sight Glass		104483
5	Bolt	Steel	
6	Bowl O-Ring	Nitrile	

#### **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **ARO** Office or Distributor.

#### **Related Documentation**

For additional information refer to:

Product Safety Information Manual 15301765.

Product Information Manual 15301773.

Maintenance Information Manual 15301781.

Manuals can be downloaded from arozone.com

Part No. 100400-63

arozone.com

© 2025 ARO

