

Lubricator Assembly


3000 Series

Parts Information





Lubricator Assembly 3000 Series L364X1-XXX Exploded Diagram

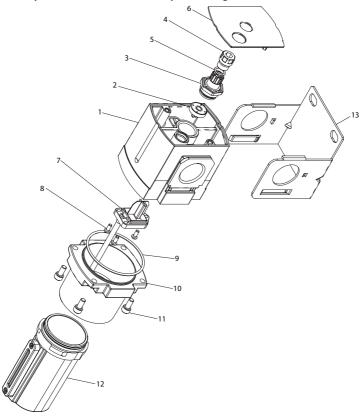


(Dwg. 15322001)

Lubricator Assembly 3000 Series L364X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Lubricator Body		
	3/4" NPT (L36451-XXX)		
	1" NPT (L36461-XXX)	Aluminum	
	3/4" BSP (L364E1-XXX)	Aluminum	
	1"BSP (L364F1-XXX)		
2	Nozzle Sheet	Nitrile	
3	Sight Dome Assembly		
4	Fill Cap	Acetal	
5	Fill Cap "O" Ring	Nitrile	
6	Upper Cover (L)	Nylon	
7	Damper Guide Assembly		
8	Damper Guide Screw	Steel	
9	Coupler	Aluminum	
10	Coupler "O" Ring	Nitrile	
11	Coupler Screw	Steel	
12	Metal Bowl Assembly		
	W/O Sight Glass		104337
	With Sight Glass		104338
13	C-Bracket	Steel	104410
	Service Kit (Includes Items: 2, 3, 4, 5, 7 and Bowl "O" Ring)		104465
	Sight Dome Repair Kit (Includes item 3)		104466

2 15301963_D

Sight Dome Assembly 3000 Series L364X1-XXX Exploded Diagram

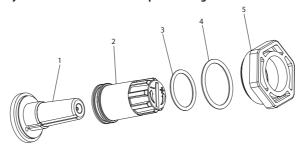


(Dwg. 15322076)

Sight Dome Assembly 3000 Series L364X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Inner Sight Dome	Nulon	
2	Outer Sight Dome	Nylon	
3	Outer Sight Dome "O" Ring	NIA-II-	
4	Inner Sight Dome "O" Ring	Nitrile	
5	Sight Dome Housing	Nylon	

Damper Guide Assembly 3000 Series L364X1-XXX Exploded Diagram

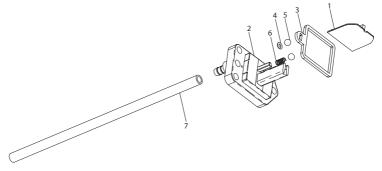


(Dwg. 15322084)

Damper Guide Assembly 3000 Series L364X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Damper	Nitrile	
2	Damper Guide	Acetal	
3	Damper Guide Gasket	Nitrile	
4	Check Ball "O" Ring	Nitrile	
6	Check Ball Spring	Stainless Steel	
7	Siphon Tube	Urethane	

15301963_D

Metal Bowl Assembly 3000 Series L364X1-XXX Exploded Diagram

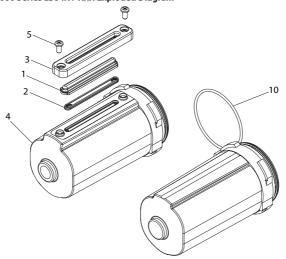

(Dwg. 15322035)

Metal Bowl Assembly 3000 Series L364X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Sight Glass	Nylon	
2	Sight Glass Gasket	Nitrile	
3	Sight Cover	Aluminum	
4	Metal Bowl		
	W/O Sight Glass (Includes Items 10)	Aluminum	104337
	With Sight Glass (Includes Items 1, 2, 3, 5 and 10)	Aluminum	104338
5	Bolt	Steel	
10	Bowl "O" Ring	Nitrile	

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

 $Tool\ repair\ and\ maintenance\ should\ only\ be\ carried\ out\ by\ an\ authorized\ Service\ Center.$

Refer all communications to the nearest **ARO** Office or Distributor.

Related Documentation

For additional information refer to: Product Safety Information Manual 15301765. Product Information Manual 15301773. Maintenance Information Manual 15301781.

Manuals can be downloaded from arozone.com.

Part No. 100400-73

arozone.com

© 2025 ARO

ARO