


## **Regulator Assembly**

3000 Series

# **Parts Information**





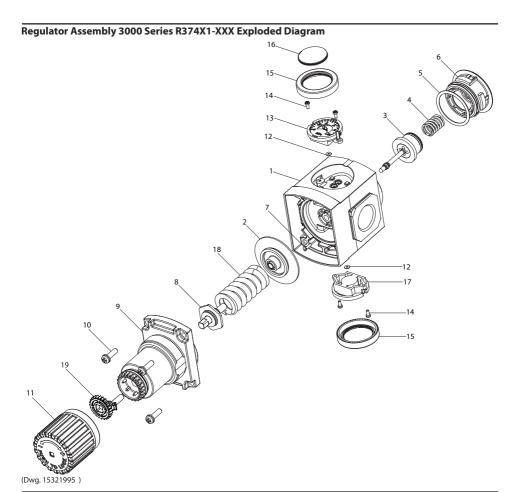


### Regulator Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number	Item	Part Description	Material	Part Number
1	Regulator Body			14	Block Cover Bolt	Steel	
	3/4" NPT (R37451-XXX)			15	Cover Ring	Nylon	
	1" NPT (R37461-XXX)	Aluminum		16	Gauge Cover	Polycarbonate	
	3/4" BSP (R374E1-XXX)			17	Block Cover	Nylon	
	1" BSP (R374F1-XXX)			18	Adjusting Spring		
2	Diaphragm Assembly				0-30 psi (R374X1-4XX)		104534
3	Valve Assembly			l	0-50 psi (R374X1-2XX)		104456
4	Valve Spring	Stainless Steel			5-125 psi (R374X1-1XX,	Steel	104457
5	Valve Guide "O" Ring	Nitrile		l	R374X1-6XX)		104457
6	Valve Guide	Nylon			10-250 psi (R374X1-3XX)		104458
7	Static Pressure Tube	Acetal		19	Tamper Kit		104455
8	Adjusting Assembly				Service Kit (R374X1-X0X)		
9	Bonnet	Aluminum			(Relieving: Includes Items		104453
10	Bonnet Screw	Steel			2, 3, 4, 5, 6)		
11	Handle	Acetal			Service Kit (R374X1-X2X)		
12	Gauge "O" Ring	Nitrile		l	(Non-Relieving: Includes Items		104454
13	Flush Type Gauge			l	2, 3, 4, 5, 6)		
	0-140 psi (R374X1-6XX)		104334				

2 15301955\_ed3

## Diaphragm Assembly 3000 Series R374X1-XXX Exploded Diagram

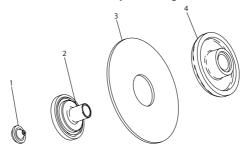


(Dwg. 15322043)

## Diaphragm Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Relief Valve Seat	Nitrile	
2	Relief Valve	Zinc	
3	Diaphragm	Nitrile+Nylon	
4	Diaphragm Shell	Aluminum	

### Valve Stem Assembly 3000 Series R374X1-XXX Exploded Diagram

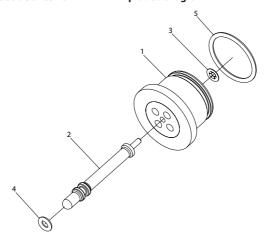


(Dwg. 15322050)

## Valve Stem Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Valve Assembly	Nitrile+Nylon	
2	Stem	Brass	
3	Pushnut	Spring Steel	
4	Stem "O" Ring	Nitrile	
5	Valve "O" Ring	Nitrile	

15301955\_ed3 3

#### Adjusting Assembly 3000 Series R374X1-XXX Exploded Diagram

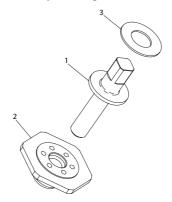

(Dwg. 15322068)

#### Adjusting Assembly 3000 Series R374X1-XXX Parts List

Item	Part Description	Material	Part Number
1	Adjusting Bolt	Charl	
2	Adjusting Nut	Steel	
3	Lining	PTFE	

#### **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand Office or Distributor.

#### **Related Documentation**

For additional information refer to:

Product Safety Information Manual 15301765.

Product Information Manual 15301773.

Maintenance Information Manual 15301781.

Manuals can be downloaded from fluids.ingersollrand.com.

Part No. 100400-72

fluids.ingersollrand.com

© 2010 Ingersoll Rand Company

