OPERATOR'S MANUAL & SALES AND ENGINEERING DATA

INCLUDING: SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING. INCLUDE MANUALS: AF0860-XX Air Motor (pn 97999-1472), 6720X-XXX Lower Pump End (pn 97999-788) & S-632 General Information Manual (pn 97999-624).

REVISED: (REV. C)

9-2-16

8" AIR MOTOR **5:1 RATIO 6" STROKE**

AF0805MXXXXXXX-XX-X FOUR-BALL PUMP SERIES

300 Series Stainless Steel



READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EOUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- **637489** for repair of air motor section.
- 637318-X4C for repair of lower pump end. Refer to the chart on page 2 for description of -X4C options.

SPECIFICATIONS


Model Series (refer to option chart)	. Air Operated, Four-Ball Double Acting Pump
Ratio	. 5:1
Air Motor	. AF0860-XX
Motor Repair Kit	. 637489
Motor Diameter	. 8" (20.3 cm)
Stroke (double acting)	. 6" (15.2 cm)
Air Inlet (female)	. 3/4 - 14 N.P.T.F 1
Air Exhaust (female)	. 1-1/4 - 11-1/2 N.P.T.F 1
Lower Pump End Series	
Lower Pump Repair Kit	
Material Inlet (female)	. 1-1/2 - 11-1/2 N.P.T.F 1
(male)	2 - 11-1/2 P.T.F. SAE Short
Material Outlet (female)	. 1 - 11-1/2 N.P.T.F 1
Weight	. 96 lbs (43.6 kgs)

PUMP PERFORMANCE

Air Inlet Pressure Range	
Fluid Pressure Range	150 - 702 p.s.i.g. (10.3 - 48.4 bar)
Maximum Rec'd Cycles / Minute .	60
Displacement Per Cycle	112.7 in³ (1847 cc)
Cycles Per Gallon	2.05
Flow @ 60 Cycles / Minute	
Noise Level @ 60 p.s.i 40 c.p.m.	86.8 db(A) *

The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (LAeg) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

PUMP DATA

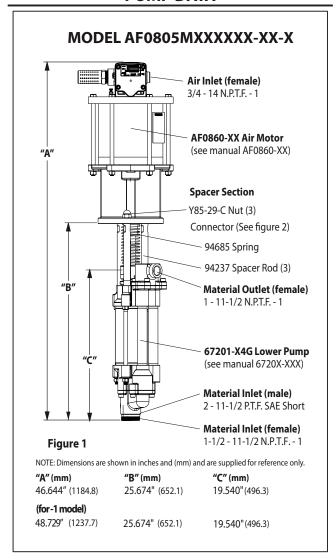

IMPORTANT


This is one of four documents which support the pump. Replacement copies of these forms are available upon request.

- AF0805MXXXXXXX-XX-X Model Operator's Manual (pn 97999-1512)
- ☐ **S-632** General Information Industrial Piston Pumps (pn
- ☐ **6720X-XXX** Lower Pump End Operator's Manual (pn 97999-788)
- ☐ **AF0860-XX** Air Motor Operator's Manual (pn 97999-1472)

PUMP OPTION DESCRIPTION CHART

	Pump Model	ump Model Lower Pump End	
Packing Material:	AF0805M11XXXX-X — Air Motor Option — Plunger Type — Spring Type — Lower Packing Material — Upper Packing Material	67201-X4G Packing Material	637318-X4C Packing Material
Glass filled PTFE (lower) Virgin PTFE (lower)	KS	7	7
UHMW-PE (upper) UHMW-PE (lower)	FF	С	С
UHMW-PE / Leather staggered (upper) UHMW-PE (lower)	HF	F	F
UHMW-PE/ Glass filled PTFE staggered (upper) UHMW-PE (lower)	GF	Р	Р
Glass filled PTFE / UHMW-PE staggered (upper) Virgin PTFE (lower)	RS	R	R
Spring Type			
Multiple Wave Spring	4	4	4
Plunger Type			
Hardened Stainless Steel w/ Ceramic coating	8	G	С
Air Motor Option			
No Option		N/A	N/A
Intergrated ball valve regulator	1	N/A	N/A

DIMENSIONS

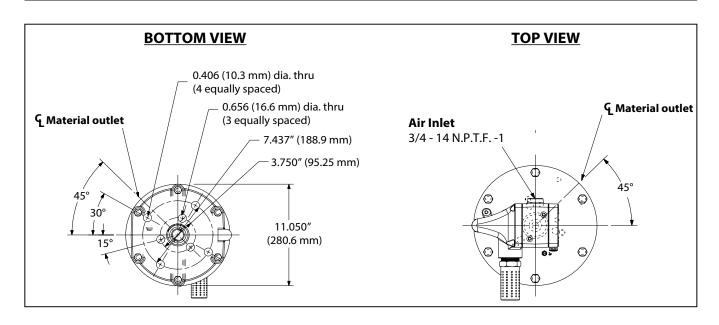

Page 2 of 4 AF0805MXXXXXX-XX-X (en)

GENERAL DESCRIPTION

The four-ball pumps are primarily designed for the high volume transfer of light and medium viscosity fluids. Stainless steel construction offers compatibility with a wide range of fluids. The lower pump is designed for easy priming. The double acting feature is standard in all ARO industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.

The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

Pump Ratio X = Maximum Pump Inlet Pressure to Pump Motor Fluid Pressure

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 120 p.s.i. (8.3 bar) inlet pressure is supplied to the motor of a 5:1 ratio pump, it will develop a maximum of 702 p.s.i. (48.4 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

WARNING Refer to general information sheet for additional safety precautions and important information.

NOTICE: Thermal expansion can occur when the fluid in the material lines is exposed to elevated temperatures. Example: Material lines located in a non-insulated roof area can warm due to sunlight. Install a pressure relief valve in the pumping system.

Replacement warning label (pn 92325) is available upon request.

TROUBLE SHOOTING

Pump problems can occur in either the air motor section or the lower pump end section. Use these basic guidelines to help determine which section is affected.

Pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or air leaks from the air motor.
- Damaged motor. Service the motor.


Pump cycles but does not deliver material.

Refer to the lower pump end manual for further trouble shooting.

PUMP CONNECTION - UPPER / LOWER

NOTE: All threads are right hand.

- 1. Lay the pump assembly on a work bench.
- 2. Remove the three (Y85-29-C) nuts from the three spacer rods (see figure 1).
- 3. Pull the air motor from the lower pump end until the motor piston rod is in the "down" position and the lower pump end rod is in the "up" position.
- 4. Using e-ring pliers, slide the "e" ring up far enough to allow the sleeve to move upward and release the two connectors (see figure 2).

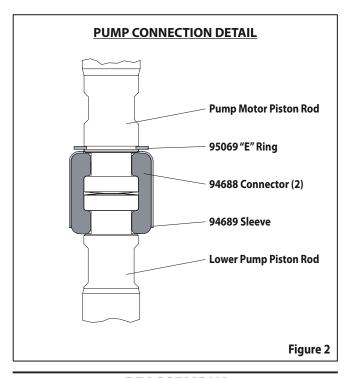


REASSEMBLY

- 1. Align the pump motor with the lower pump end. Position the air inlet of the motor 45° from the material outlet.
- 2. Install the two (94688) connectors and retain with the (94689) sleeve. Slide the (95069) "e" ring back into position.
- 3. Reinstall the spacer rods to the pump motor.
- 4. Bring the motor and lower pump together and retain with three (Y85-29-C) nuts.

AF0805MXXXXXX-XX-X (en) Page 3 of 4

PERFORMANCE CURVES


PERFORMANCE BASED ON 30wt. OIL (100 cSt) AT 40° C TEMPERATURE CYCLES PER MINUTE (CPM)

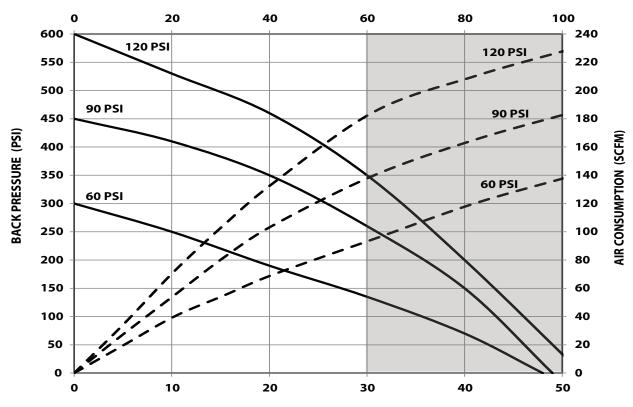

FLOW RATE - GALLONS PER MINUTE (GPM)

NOTE: NON SHADED AREA OF THE GRAPH REPRESENTS RECOMMENDED OPERATING RANGE

PERFORMANCE BASED ON 30wt. OIL (100 cSt) AT 40° C TEMPERATURE CYCLES PER MINUTE (CPM)

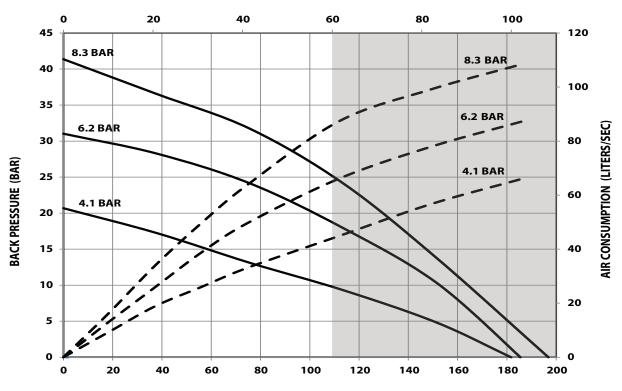

FLOW RATE - LITERS PER MINUTE (LPM)

NOTE: NON SHADED AREA OF THE GRAPH REPRESENTS RECOMMENDED OPERATING RANGE

