OPERATOR'S MANUAL

PM30R-X-B

INCLUDING: OPERATION, INSTALLATION AND MAINTENANCE

3" DIAPHRAGM PUMP 1:1 RATIO (METALLIC)

RELEASED: 4-30-04 **REVISED:** 5-5-17 (REV: F)

READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

Refer to Model Description Chart to match the pump material options.

637303-XXX for Fluid Section Repair with seats (see page 4). 637303-XX for Fluid Section Repair without seats (see page 4). NOTE: This kit also contains several air motor seals which will need to be replaced.

637369 for Air Section Repair (see page 6). 637374 Major Air Valve Assembly (see page 7).

PUMP DATA


ModelsSee Model Description Chart for "-XXX".Pump TypeMetallic Air Operated Double DiaphragmMaterialsee Model Description Chart.Weight246 lbs (111.6 kgs)Maximum Air Inlet Pressure120 psig (8.3 bar)Maximum Material Inlet Pressure10 psig (0.69 bar)Maximum Outlet Pressure120 psig (8.3 bar)Maximum Flow Rate (Flooded inlet)275 gpm (1041 lpm)Displacement / Cycle @ 100 psig2.8 gal. (10.6 lit.)Maximum Particle Size3/8" dia. (9.5 mm)Maximum Temperature Limits (Diaphragm/ Ball/ Seat material)Nitrile10° to 180° F (-12° to 82° C)Polypropylene.35° to 175° F (2° to 79° C)Santoprene [®] -40° to 225° F (-40° to 107° C)
Santoprene [™]
PTFE 40° to 225° F (4° to 107° C)
Dimensional Data see page 8
Mounting Dimensions 10-5/32" x 12-1/16"
(258 mm x 306 mm)
Noise Level @ 70 psig, 50 cpm $^{\mathbb{O}}$

(1) Tested with 67263 muffler assembly installed.


(2) The pump sound pressure levels published here have been updated to an Equivalent

Continuous Sound Level (LA_{eq}) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

NOTICE: All possible options are shown in the chart, however, certain combinations may not be recommended, consult a representative or the factory if you have questions concerning availability.

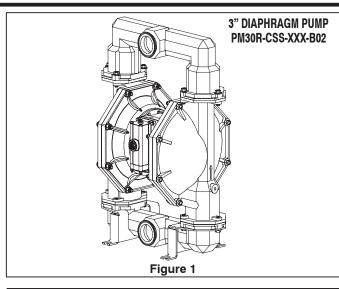

MODEL DESCRIPTION CHART

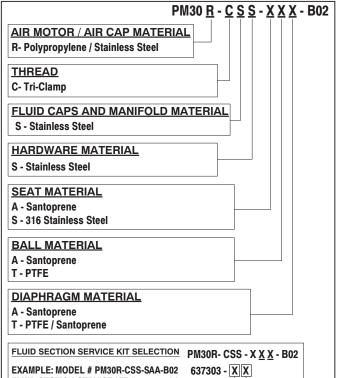

637303 - XX Ball - Diaphragm FLUID SECTION SERVICE KIT # 637303-AA

INGERSOLL RAND COMPANY LTD 209 NORTH MAIN STREET - BRYAN, OHIO 43506 (800) 495-0276 • FAX (800) 892-6276 © 2017 CCN 15217847 arozone.com



OPERATING AND SAFETY PRECAUTIONS

READ, UNDERSTAND, AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.



EXCESSIVE AIR PRESSURE STATIC SPARK



WARNING EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.

- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.

WARNING STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.

- Use the pump grounding screw terminal provided. Use Aro Part No. 66885-1 Ground Kit or connect a suitable ground wire (12 ga. min.) to a good earth ground source.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.

WARNING Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.

- In the event of a diaphragm rupture material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 1" minimum i.d. hose between the pump and the muffler.

WARNING HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.

Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.

WARNING HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.

- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- WARNING EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be used with III.-Trichloroethane, Methylene Chloride or other Halogenated Hydrocarbon solvents which may react and explode.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- ▲ WARNING MISAPPLICATION HAZARD. Do not use models containing aluminum wetted parts with food products for human consumption. Plated parts can contain trace amounts of lead.
- ▲ CAUTION Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- ▲ CAUTION Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits. Refer to PUMP DATA on page 1 of this manual.
- **CAUTION** Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- ▲ CAUTION Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- ▲ CAUTION Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.
- Disconnect air line from pump when system sits idle for long periods of time.
- **CAUTION** Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.

	 Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.
	 Hazards or unsafe practices which could result in minor personal injury, product or property damage.
NOTICE	 Important installation, operation or maintenance information.

GENERAL DESCRIPTION

The ARO Diaphragm Pump offers high volume delivery even at low air pressure and a broad range of material compatibility options available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and positive fluid pressure in the fluid chambers, valve checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and it will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

AIR AND LUBE REQUIREMENTS

WARNING EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the Nitrile "O" rings in the air motor section of the pump.

OPERATING INSTRUCTIONS

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation it is recommended that a "Check Valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

MAINTENANCE

Refer to the part views and descriptions as provided on page 4 through 7 for parts identification and Service Kit information.

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Service kits are divided to service two separate diaphragm pump functions: 1. AIR SECTION, 2. FLUID SECTION. The FLUID SEC-TION is divided further to match typical part MATERIAL OPTIONS.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include pump in preventive maintenance program.
- Before disassembling empty captured material in the outlet manifold by turning the pump upside down to drain material from the pump.

FLUID SECTION DISASSEMBLY

- 1. Remove top manifold(s).
- 2. Remove (22) balls, (19) "O" rings and (21) seats.
- 3. Remove (15) fluid caps.
- NOTE: Only PTFE diaphragm models use a primary (7) diaphragm and a backup (8) diaphragm. Refer to the auxiliary view in figure 2.
- 4. Remove the (6) diaphragm washer, (7) or (7 / 8) diaphragms, (5) backup washer and (196) cushion.

NOTE: Do not scratch or mar the surface of (1) diaphragm rod.

FLUID SECTION REASSEMBLY

SERVICE NOTE: ARO PN 204214-T diaphragm assembly tool is recommended for use when reassembling the pump.

- Reassemble in reverse order.
- Clean and inspect all parts. Replace worn or damaged parts with new parts as required.
- Lubricate (1) diaphragm rod and (144) "U" cup with Lubriplate ® FML-2 grease. (94276 grease packet is included in service kit.)
- Be certain the diaphragm assembly bottoms out on the (1) rod, back off PTFE diaphragm assembly far enough to align holes.
- For models with PTFE diaphragms: Item (8) Santoprene diaphragm is installed with the side marked "AIR SIDE" towards the pump center body. Install the (7) PTFE diaphragm with the side marked "FLUID SIDE" towards the fluid cap.
- Re-check torque settings after pump has been re-started and run a while.

Santoprene ® is a registered trademark of Monsanto Company, licensed to Advanced Elastomer Systems, LP. • Lubriplate ® is a registered trademark of Lubriplate Division (Fiske Brothers)

PARTS LIST / PM30R-X-B02 FLUID SECTION

FLUID SECTION SERVICE KITS (637303-XXX or 637303-XX)

★ For Fluid Kits With Seats:

637303-XXX Fluid Section Service Kits include: Seats (see SEAT Option, refer to -XXX in chart below), Balls (see BALL Option, refer to -XXX in chart below), Diaphragms (see DIAPHRAGM Option, refer to -XXX in chart below), and items: 3, 19, 70, 144, 175, 196 (listed below) plus (174) and 94276 Lubriplate FML-2 grease (page 6).

★ For Fluid Kits Without Seats:

637303-XX Fluid Section Service Kits include: Balls (see BALL Option, refer to -XX in chart below), Diaphragms (see DIAPHRAGM Option, refer to -XX in chart below), and items: 3, 19, 70, 144, 175, 196 (listed below) plus (174) and 94276 Lubriplate FML-2 grease (page 6).

	SEAT OPTIONS PM30R-CSS-XXX-B02						BALL OPTIONS PM30R-CSS-XXX-B						2		
	★ "21"						★ "22" (3-1/4" diameter) ★ "19				★ " 19 " (3/	(3/16" x 5" o.d.)			
- <u>X</u> XX	Seat	Qty	[Mtl]		- <u>X</u> XX	Seat	Qty	[Mtl]	-X <u>X</u> X	Ball	Qty	[Mtl]	"O" Ring	Qty	[Mtl]
-AXX	94104-A	(4)	[Sp]		-HXX	94114	(4)	[SH]	-XAX	94103-A	(4)	[Sp]	94115	(4)	[E]
-CXX	94104-C	(4)	[H]		-KXX	94621-K	(4)	[K]	-XCX	94103-C	(4)	[H]	Y327-350	(4)	[V]
-EXX	95678	(4)	[C]		-LXX	94939	(4)	[Ha]	-XGX	94103-G	(4)	[B]	Y325-350	(4)	[B]
-FXX	95674	(4)	[A]		-SXX	94113	(4)	[SS]	-XTX	94103-T	(4)	[T]	Y328-350	(4)	[T]
-GXX	94104-G	(4)	[B]						-XVX	94103-V	(4)	[V]	Y327-350	(4)	[V]

	DIAPHRAGM OPTIONS PM30R-CSS-XXX-B02										
	★Service Kits With Seats - <u>X</u> XX = (Seat)	★Service Kits Without Seats -XX = (Ball)					"8"		★ "3"		
-XX <u>X</u>	-X <u>X</u> X = (Ball) -XX <u>X</u> = (Diaphragm)	-XX = (Diaphragm)	Diaphragm	Qty	[Mtl]	Diaphragm	Qty	[Mtl]	"O" Ring	Qty	[Mtl]
-XXA	637303-XXA	637303-XA	94091-A	(2)	[SP]				Y328-210	(2)	[T]
-XXB	637303-XXB	637303-XB	94110-A	(2)	[SP]				Y328-210	(2)	[T]
-XXC	637303-XXC	637303-XC	94091-C	(2)	[H]				Y327-210	(2)	[V]
-XXG	637303-XXG	637303-XG	94016-2	(2)	[B]				Y328-210	(2)	[T]
-XXL	637303-XXL	637303-XL	94090-L	(2)	[L]	94110-A	(2)	[SP]	Y328-210	(2)	[T]
-XXT	637303-XXT	637303-XT	94090-T	(2)	[T]	94110-A	(2)	[SP]	Y328-210	(2)	[T]
-XXV	637303-XXV	637303-XV	95345	(2)	[V]				Y327-210	(2)	[V]


	COMMON PARTS										
Item	Description (size)	Qty	Part No.	[Mtl]		ltem	Description (size)	Qty	Part No.	[Mtl]	
1	Rod	(1)	94984	[C]		61	Outlet Manifold	(1)	94969	[SS]	
*3	"O" Ring (1/8' x 1" o.d.)	(2)	Y328-210	[T]		68	Air Cap	(1)	94031-1	[SS]	
5	Backup Washer	(2)	94831-2	[SS]		69	Air Cap	(1)	94031-2	[SS]	
6	Fluid Side Washer	(2)	94803	[SS]		★√70	Gasket	(2)	94100	[B]	
9	Washer (3/16" i.d. x 2" o.d. x 5/32")	(2)	Y13-12-T	[\$\$]		126	Pipe Plug (1/4 -18 NPTF x 7/16")	(2)	Y17-51-S	[SS]	
14	Cap Screw (3/14" -16 x 3-1/4")	(2)	Y5-134-T	[\$\$]		131	Screw (M10 x 1.5 - 6g x 120 mm)	(4)	94531	[C]	
15	Fluid Cap	(2)	94972	[SS]		★√ 144	"U" Cup (3/16" x 1-3/8" o.d.)	(2)	Y186-51	[B]	
26	Screw (M12 x 1.75 - 6g x 45 mm)	(12)	94412-2	[\$\$]	1	★√ 175	"O" Ring (3/32" x 1' o.d.)	(2)	Y325-117	[B]	
27	Screw (M12 x 1.75 - 6g x 60 mm)	(16)	94991	[\$\$]		√ 180	Gasket (0.406" i.d. x 0.031" thick)	(4)	94098	[Co]	
29	Nut (M12 x 1.75 - 6g)	(16)	95053	[\$\$]	1	181	Roll Pin (0.156" o.d x 3/4" long)	(4)	Y178-56-S	[SS]	
32	Leg	(2)	94703-2	[\$\$]]	★ 196	Cushion	(2)	94631	[SP]	
60	Inlet Manifold	(1)	94968	[\$\$]		<u></u>	·				

□ "Smart Parts", keep these items on hand in addition to the Service Kits for fast repair and reduction of down time.

✓ Air Motor Kit parts, see page 6.

	MATERIAL CODE										
[A]	=	Aluminum	[K]	=	KynarPVDF						
[B]	=	Nitrile	[L]	=	Long Life PTFE						
[C]	=	Carbon Steel	[SH]	=	Hard Stainless Steel						
[Co]	=	Copper	[SP]	=	Santoprene						
[CI]	=	Cast Iron	[SS]	=	Stainless Steel						
[E]	=	E.P.R.	[T]	=	PTFE						
[H]	=	Hytrel	[V]	=	Viton						
[Ha]	=	Hastelloy-C									


PARTS LIST / PM30R-X-B02 FLUID SECTION

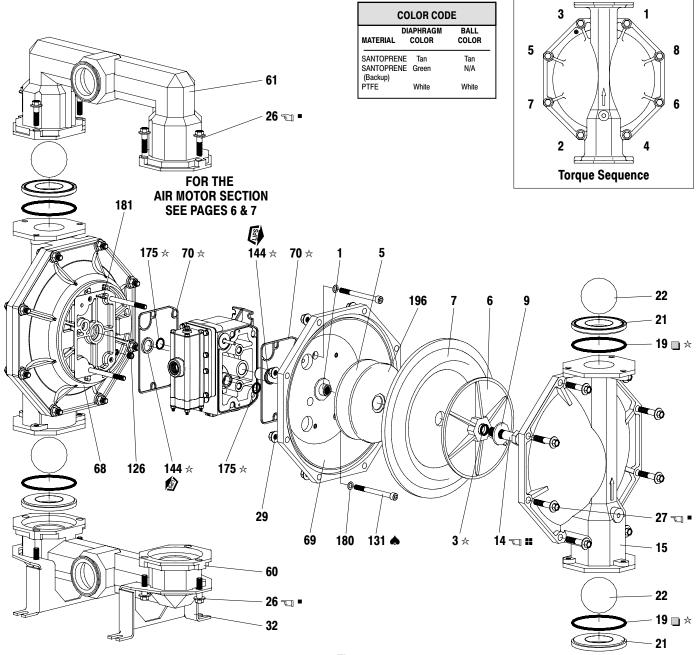





♦ Lubriplate FML-2 is a white food grade petroleum grease. MSDS available upon request.

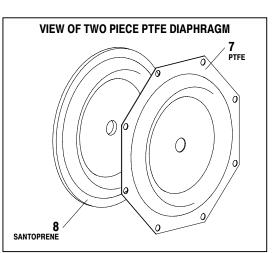

PARTS LIST / PM30R-X-B02 AIR SECTION

Indicates parts included in 637369 Air Section Service Kit shown below and items (70), (144), (175) and (180) shown on page 4.

			Α	IR MO	ΓOF
ltem	Description (size)	Qty	Part No.	[Mtl]	
101	Center Body	(1)	95667	[P]	
103	Bushing	(1)	94092	[D]	
105	Screw (M6 x 1 - 6g x 180 mm)	(4)	95921	[SS]	
107	End Plate	(2)	95846	[SS]	
111	Spool	(1)	95651	[D]	
118	Actuator Pin (.250" x 2.276" long)	(2)	94083	[SS]	
121	Sleeve	(2)	94084	[D]	
<i>▶</i> 132	Gasket	(1)	94099	[B]	
133	Washer (M6)	(8)	95931	[SS]	
134	Screw (M6 x 1 - 6g x 35 mm)	(8)	95923	[SS]	
135	Valve Block	(1)	95789	[P]	
136	End Cap	(1)	95790	[P]	
<i>▶</i> 137	"O" Ring (1/16" x 2" o.d.)	(1)	Y325-32	[B]	
<i>▶</i> 138	"U" Cup (3/16" x 1.792" o.d.)	(1)	95966	[B]	
J 139	"U" Cup (3/16" x 1-1/4" o.d.)	(1)	Y186-50	[B]	
140	Valve Insert	(1)	95650	[Ck]	
141	Valve Plate	(1)	95659	[Ck]	
<i>▶</i> 146	"O" Ring (1/8" x 7/8" o.d.)	(1)	Y325-208	[B]	

★ Fluid Section Service Kit parts, see page 4.

	MATERIAL COD	E
[B] = Nitrile [Br] = Brass [Ck] = Ceramic	[D] = Acetal [P] = Polypropylene [SP] = Santoprene	[SS] = Stainless Steel [U] = Polyurethane

AIR MOTOR SECTION SERVICE

Service is divided into two parts - 1. Pilot Valve, 2. Major Valve. GENERAL REASSEMBLY NOTES:

- Air Motor Section service is continued from Fluid Section repair.
- Inspect and replace old parts with new parts as necessary. Look for deep scratches on surfaces, and nicks or cuts in "O" rings.
- Take precautions to prevent cutting "O" rings upon installation.
- Lubricate "O" rings with Lubriplate FML-2 grease.
- Do not over-tighten fasteners, refer to torque specification block on view.
- Re-torque fasteners following restart.
- SERVICE TOOLS To aid in the installation (168) "O" rings onto the (167) pilot piston, use Tool # 204130-T, available from Aro.

PILOT VALVE DISASSEMBLY

- 1. A light tap on (118) should expose the opposite (121) sleeve, (167) pilot piston and other parts.
- 2. Remove (170) sleeve, inspect inner bore of sleeve for damage.

PILOT VALVE REASSEMBLY

1. Clean and lubricate parts not being replaced from service kit.

PARTS				
ltem	Description (size)	Qty	Part No.	[Mti]
✓ 147	"O" Ring (1/8" x 5/8" o.d.)	(1)	Y325-204	[B]
JF 166	Track Gasket	(1)	94026	[B]
JA 167	Pilot Piston (includes 168 and 169)	(1)	67164	[D]
168	"O" Ring (3/32" x 5/8" o.d.)	(2)	94433	[U]
169	"U" Cup (1/8" x 7/8" o.d.)	(1)	Y240-9	[B]
170	Piston Sleeve	(1)	94081	[Br]
J 171	"O" Ring (3/32" x 1-1/8" o.d.)	(1)	Y325-119	[B]
<i>▶</i> 172	"O" Ring (1/16" x 1-1/8" o.d.)	(1)	Y325-22	[B]
J 173	"O" Ring (1/16" x 1-3/8" o.d.)	(2)	Y325-26	[B]
★ / ~ 174	"O" Ring (1/8" x 1/2" o.d.)	(2)	Y325-202	[B]
<i>▶</i> 176	Diaphragm (check valve)	(2)	94102	[SP]
J 199	Track Gasket	(1)	95666	[B]
J 200	Gasket	(1)	95665	[B]
⊮ 232	"O" Ring (1/8" x 1/2" o.d.)	(2)	Y325-202	[B]
233	Adapter Plate	(1)	95761	[P]
236	Nut (M6 x 1 - 6g)	(4)	95924	[SS]
*~	Lubriplate FML-2 Grease	(1)	94276	
	Lubriplate Grease Packets (10)		637308	

- 2. Install new (171 and 172) "O" rings, replace (170) sleeve.
- 3. Install new (168) "O" rings and (169) seal Note the lip direction. Lubricate and replace (167).
- 4. Reassemble remaining parts, replace (173 and 174) "O" rings.


MAJOR VALVE DISASSEMBLY

- 1. Remove (135) valve block and (233) adapter plate, exposing (132 and 166) gaskets, (232) "O" ring and (176) checks.
- 2. Remove (233) adapter plate, releasing (140) valve insert, (141) valve plate, (199 and 200) gaskets and (146, 147 and 232) "O" rings.
- 3. Remove (136) end cap and (137) "O" ring, releasing (111) spool.

MAJOR VALVE REASSEMBLY

- 1. Install new (138 and 139) "U" cups on (111) spool LIPS MUST FACE EACH OTHER.
- 2. Insert (111) spool into (135) valve block.
- Install (137) "O" ring on (136) end cap and assemble end cap to (135) valve block, securing with (107) end plates and (105) screws.
- Install (140) valve insert and (141) valve plate into (135) valve block. NOTE: Assemble (140) valve insert with "dished" side toward (141) valve plate. Assemble (141) valve plate with 2 identification dots toward (199 and 200) gaskets.
- 5. Assemble (146, 147 and 232) "O" rings, (199 and 200) gaskets and (233) adapter plate to (135) valve block.
- Assemble (132 and 166) gaskets, (176) checks and (232) "O" ring to (101) body.
- 7. Assemble (135) valve block and components to (101) body, securing with (134) screws.

PARTS LIST / PM30R-X-B02 AIR SECTION

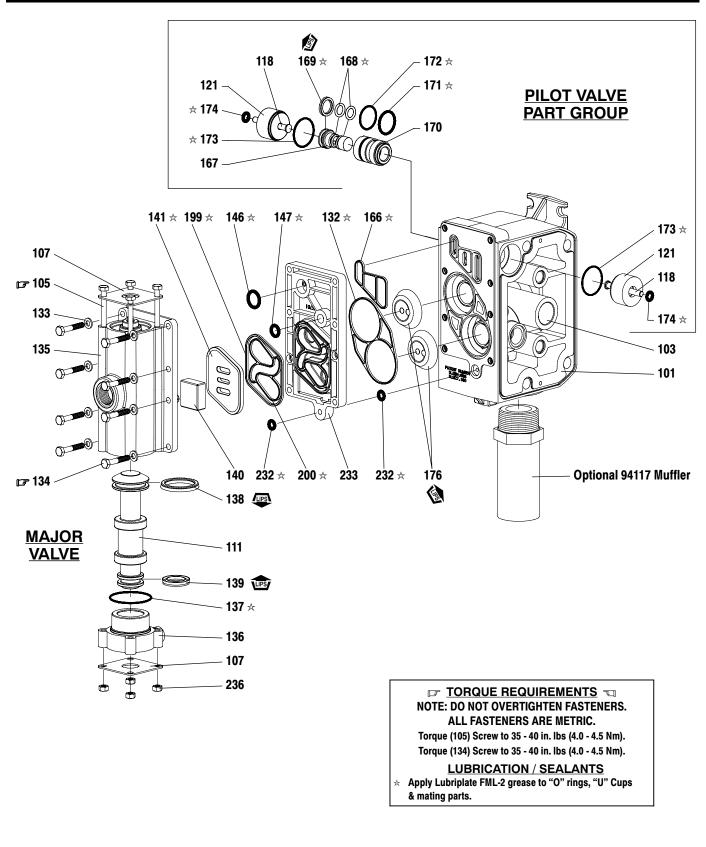

A 637374 Replacement Major Valve Service Assembly is available separately, which includes the following: 105 (4), 107 (2), 111, 132, 135, 136, 137, 138, 139, 140, 141, 146, 147, 166, 176 (2), 199, 200, 232 (2), 233 and 236 (4)

TROUBLE SHOOTING

Product discharged from exhaust outlet.

- Check for diaphragm rupture.
- Check tightness of (14) cap screw.

Air bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and fluid caps.
- Check tightness of (14) cap screw.

Motor blows air or stalls.

- Check (176) check valve for damage or wear.
- Check for restrictions in valve / exhaust.

Low output volume, erratic flow, or no flow.

- Check air supply.
- Check for plugged outlet hose.
- Check for kinked (restrictive) outlet material hose.
- Check for kinked (restrictive) or collapsed inlet material hose.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be a non-collapsing type, capable of pulling a high vacuum.
- Check all joints on the inlet manifolds and suction connections. These must be air tight.
- Inspect the pump for solid objects logged in the diaphragm chamber or the seat area.

DIMENSIONAL DATA

