## OPERATOR'S MANUAL

## PZ15X-XXX-XXX-AXX

**INCLUDING: OPERATION, INSTALLATION, SAFETY AND MAINTENANCE** 

RELEASED: 1 REVISED: (REV: D)

4-15-23

# 1-1/2" DIAPHRAGM PUMP

1:1 RATIO (METALLIC)



# READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

#### **SERVICE KITS**

**637375-XXX** for fluid section repair **with** seats (see page 9). **637375-XX** for fluid section repair **without** Seats (see page 9). **NOTE:** This kit also contains several air motor seals which will need to be replaced.

**637389** for air section repair (see page 11). **637390-X** major air valve assembly (see page 12).

### **PUMP DATA**

**Models.....** see Model Description Chart on page 2 for "-XXX" options

**Pump Type**. . Metallic Air Operated Double Diaphragm

Material.... see Model Description Chart

Weight

material)


E.P.R / EPDM ... -60° to 280° F (-51° to 138° C)
Hytrel® ... -20° to 180° F (-29° to 82° C)
Nitrile® ... 10° to 180° F (-12° to 82° C)
Polypropylene ... 32° to 175° F (0° to 79° C)
Santoprene® ... -40° to 225° F (-40° to 107° C)
PTFE ... 40° to 225° F (4° to 107° C)

Viton® ...... -40° to 350° F (-40° to 177° C) **Dimensional Data**.... see page 13 **Mounting Dimensions** .... 9" x 11.75"

(228.6 mm x 298.5 mm)

**Noise Level** @ 70 psig, 60 cpm....... 82.8 dB(A)<sup>①</sup>


 $<sup>\</sup>textcircled{1}$  The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level (LA<sub>eq</sub>) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1. using four microphone locations.

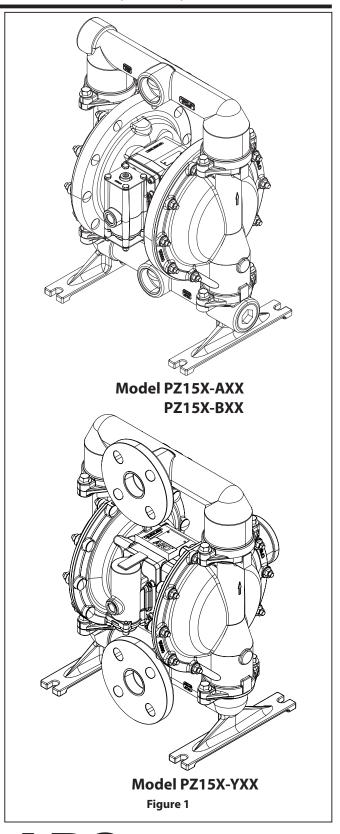





## **MODEL DESCRIPTION CHART**

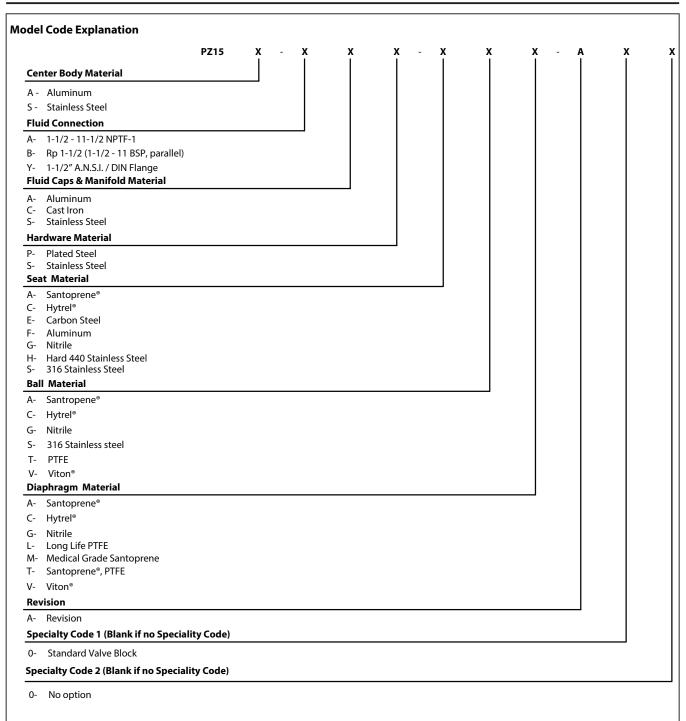

NOTICE: All possible options are shown in the chart, however, certain combinations may not be recommended.

Consult a representative or the factory if you have questions concerning availability.

Page 2 of 16 PZ15X-XXX-XXX-AXX (en)

#### **OPERATING AND SAFETY PRECAUTIONS**

READ, UNDERSTAND AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.





All diaphragm pump models listed in the Declarations of Conformity 5 and 6 (located near the end of the manual) conform to the requirements of the EU "Machinery Directive," UK regulation "Supply of Machinery (Safety) Regulations" 2008 (SI 2008/1597), and can be used in potentially explosive atmosphere areas with Zone 0/20 inside and outside the pump, but ONLY when the special conditions listed below under the section "SPECIFIC CONDITIONS OF SAFE USE FOR EXPLOSIVE ATMPOSHERES" are followed. The definitions for "Potentially Explosive Atmospheres" varies by geographical region around the world, and is summarized in the section below.

You must read and follow the detailed explanation of these hazards and follow the appropriate instructions noted in this manual for safe installation and operation.

# SAFETY INFORMATION - EXPLANATION OF SAFETY SIGNAL WORDS:

- **WARNING** WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE NOTICE is used to address practices not related to personal injury.

# <u>SPECIFIC CONDITIONS OF SAFE USE FOR EXPLOSIVE ATMOSPHERES:</u>

These pumps can be used in an area with Zone 0/20 inside and outside the pump.

- <u>^</u><u>MARNING</u> Non-compliance with any of these special conditions could create an ignition source that may ignite any potentially explosive atmospheres.
- **AWARNING** POTENTIAL ELECTROSTATIC CHARGING HAZARD. Clean only with a damp cloth.
- Sparks can ignite flammable material and vapors.
- The pumping system and object being sprayed must be grounded when it is pumping, flushing, recirculating or spraying flammable materials such as paints, solvents, lacquers, etc. or used in a location where surrounding atmosphere is conducive to spontaneous combustion. Ground the dispensing valve or device, containers, hoses and any object to which material is being pumped.
- Use the pump grounding lug provided on metallic pumps for connection of a ground wire to a good earth ground source. Use Aro Part No. 66885-1 Ground Kit or a suitable ground wire (10 AWG or thicker).
- Pumps that will operate in environments defined as "hazardous locations" or "Potentially Explosive Atmospheres" must only be installed, connected and set-up by qualified personnel with knowledge and understanding of protection classes, regulations and provisions for apparatus in hazardous areas, for the region where the pump will operate.

- Secure pump, connections and all contact points (feet must be bolted) and provide clearance around the pump to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire or use groundable piping.
- Use a grounded exhaust hose between the pump and the muffler. (Refer to minimum size under Installation.)
- Use proper ventilation.
- Keep flammables away from heat, open flames and sparks.
- Keep containers closed when not in use.
- <u>★WARNING</u> FOR MODELS CONTAINING ALUMINUM EN-CLOSURES. Pumps must be mounted in such a manner as to eliminate the risk of sparks caused by friction or impact.
- Protect pump from external damage.
- Regularly inspect coatings for damage and if damage occurs do not use in Zone 0/20.
- <u>AWARNING</u> EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be used with 1,1,1-trichloroethane, methylene chloride or other halogenated hydrocarbon solvents which may react and explode.
- <u>warning</u> EXPLOSION HAZARD: Ensure that the pump will not exceed a maximum temperature of 25° C (77° F) lower than the auto ignition-temperature of the fluid being pumped.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- <u>AWARNING</u> If elevated temperatures or inlet pressure levels are detected, shut the pump off and discontinue its use until it can be inspected and/or repaired.
- The following conditions apply if fluid temperature, air inlet temperature and air inlet pressure are not controlled within the process:
  - Sensors using for measuring the inlet air and fluid temperature and over pressure of inlet air must be connected to a monitoring and shutdown system which is sufficiently reliable and compliant with the requirements for ATEX Safety related devices as defined in Annex II Clause 1.5.1 of Directive 2014/34/ EU (i.e. b2 (SIL2) as defined by EN ISO 80079-37cl 6.5).
  - Associated programmable electronic devices forming a part of ignition protection systems must be installed in a safe area or be suitably certified ATEX rated for the zone into which where are installed.
  - The ignition protection system, when installed, is to be subjected to functional and accuracy tests to ensure shutdown occurs if the limits specified by the manufacturer are exceeded.

PZ15X-XXX-XXX (en) Page 3 of 16

- Trip points for the temperature and pressure monitoring system shall be set such that shutdown of the pump occurs if air inlet pressure exceeds 120 PSIG or if the air inlet or fluid temperature exceeds the limitation on page 5.
- <u>^</u>MARNING Do not perform maintenance or repairs in an area where explosive atmospheres are present. Prior to maintenance, ensure unit is unplugged and fully de-energized.
  - NOTICE Only FML-2 grease should be employed for lubrication of moving part.
- <u>MARNING</u> MAXIMUM SURFACE TEMPERATURE LIMITS.

  Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits.
- The actual surface temperature of the pumps depend on the running conditions of the pump, the materials of construction, the temperature of the fluid pumped, and the environmental conditions.

- For ambient, process fluid and air inlet temperature see the temperature table on page 5.
- Ensure proper housekeeping to eliminate dust buildup on the pump. Certain dusts may ignite at pump surface temperature limits, as noted on page 5.
- For use in Explosive Gas Atmospheres the TEMPERA-TURE range rating is limited by the materials & seals used in the construction per possible product configuration. Material temperature limitations are provided and must not be exceeded in the application. The pumps follow ISO 80079-36:2016: Ex h IIC Ga.
- For use in Explosive Dust Atmospheres the TEMPERA-TURE range rating is limited by the materials & seals used in the construction per possible product configuration. Material temperature limitations are provided and must not be exceeded in the application. The pumps follow ISO 80079-36:2016: Ex h IIIC Da.
- <u>MARNING</u> Pump operation involves the risk of producing an electrostatic charge when flowing liquids. Medium and higher conductive fluids should be used as defined by EN IEC 60079-32-1:2018 Section 7.1.4. The minimum allowed fluid conductivity shall be as follows:
  - 25 pS/m for fluids with dielectric constant less than
  - 50 pS/m for fluids with dielectric constant higher than 2.
  - 100 pS/m for fluids with substantially higher dielectric constants than 2 or when it is unknown.

Page 4 of 16 PZ15X-XXX-XXX-AXX (en)

## **TEMPERATURE LIMITS**

The seat, ball and diaphragm materials for metallic pumps establish the ambient and pump temperature limitations. Use the temperature table below and the model code for ball, seat, diaphragm material to determine the temperature range for each pump model. Model code is explained in detail on page 2.

Example: PZ10X-XXX-AAA-AXX. AAA code is located in the first temperature range in the table below.

Result: -20°C to +40°C ambient temperature limit and -40°C to +78°C pump temperature limit.

| Ambient<br>Temperature Limits     | Air Inlet and Process<br>Fluid Temperature<br>Limits | Ball, Seat, Diaphragm Model Code Letters<br>Example: PZ10X-XXX- <u>XXX</u> -AXX |            |            |            |            |            |            |            |            |            |
|-----------------------------------|--|---|------------|------------|------------|------------|------------|------------|------------|------------|------------|
|                                   |  | AAA   | AAB        | AAM        | AAV        | ASA        | ASB        | ASM        | ASV        | AVA        | AVB        |
| 20061 . 4006                      | 40061 . 7006   | AVM   | AVV        | EAA        | EAB        | EAV        | ESA        | ESB        | ESV        | EVA        | EVB        |
| -20°C to +40°C                    | -40°C to +78°C                                       | EVV   | FAA        | FAB        | FAV        | FSA        | FSB        | FSV        | FVA        | FVB        | FVV        |
| -4°F to +104°F                    | -40°F to +172°F                                      | HAA   | HAB        | HAV        | HSA        | HSB        | HSV        | HVA        | HVB        | HVV        | SAA        |
|                                   |  | SAB   | SAV        | SSA        | SSB        | SSV        | SVA        | SVB        | SVV        |            |            |
|                                   |  | AAC   | ACA        | ACB        | ACC        | ACM        | ACV        | ASC        | AVC        | CAA        | CAB        |
|                                   |  | CAC   | CAM        | CAV        | CCA        | CCB        | CCC        | CCM        | CCV        | CSA        | CSB        |
| -20°C to +40°C                    | -29°C to +78°C                                       | CSC   | CSM        | CSV        | CVA        | CVB        | CVC        | CVM        | CVV        | EAC        | ECA        |
| -4°F to +104°F                    | -20°F to +174°F                                      | ECB   | ECC        | ECV        | ESC        | EVC        | FAC        | FCA        | FCB        | FCC        | FCV        |
|                                   |  | FSC   | FVC        | HAC        | HCA        | HCB        | HCC        | HCV        | HSC        | HVC        | SAC        |
|                                   |  | SCA   | SCB        | SCC        | SCV        | SSC        | SVC        |            |            |            |            |
|                                   |  | AAG   | ACG        | AGA        | AGB        | AGC        | AGG        | AGM        | AGV        | ASG        | AVG        |
|                                   |  | CAG   | CCG        | CGA        | CGB        | CGC        | CGG        | CGM        | CGV        | CSG        | CVG        |
|                                   |  | EAG   | ECG        | EGA        | EGB        | EGC        | EGG        | EGV        | ESG        | EVG        | FAG<br>GAE |
| -12°C to +40°C<br>+10°F to +104°F |  | FCG<br>GAC  | FGA<br>GAG | FGB<br>GAM | FGC<br>GAV | FGG<br>GCA | FGV<br>GCB | FSG<br>GCC | FVG<br>GCG | GAA<br>GCM | GC\        |
|                                   | -12°C to +78°C                                       | GGA   | GAG        | GGC        | GGG        | GGM        | GGV        | GSA        | GSB        | GSC        | GSC        |
|                                   | +10°F to +174°F                                      | GSM   | GSV        | GVA        | GVB        | GVC        | GVG        | GVM        | GVV        | HAG        | HCC        |
| +101 to +10 <del>4</del> 1        | +101 10+17+1   | HGA   | HGB        | HGC        | HGG        | HGV        | HSG        | HVG        | KAA        | KAB        | KAC        |
|                                   |  | KAG   | KAV        | KCA        | KCB        | KCC        | KCG        | KCV        | KGA        | KGB        | KGC        |
|                                   |  | KGG   | KGV        | KSA        | KSB        | KSC        | KSG        | KSV        | KVA        | KVB        | KVC        |
|                                   |  | KVG   | KVV        | SAG        | SCG        | SGA        | SGB        | SGC        | SGG        | SGV        | SSC        |
|                                   |  | SVG   |            |            |            |            |            |            |            |            |            |
| 0°C to +40°C                      | 0°C to +78°C   | PAA   | PAC        | PAG        | PAV        | PCA        | PCC        | PCG        | PCV        | PGA        | PGC        |
| +32°F to +104°F                   | +32°F to +174°F                                      | PGG   | PGV        | PSA        | PSC        | PSG        | PSV        | PVA        | PVC        | PVG        | PV۱        |
|                                   |  | AAL   | AAT        | ACL        | ACT        | AGL        | AGT        | ASL        | AST        | ATA        | ATE        |
|                                   |  | ATC   | ATG        | ATL        | ATM        | ATT        | ATV        | AVL        | AVT        | CAL        | CAT        |
|                                   |  | CCL   | CCT        | CGL        | CGT        | CSL        | CST        | CTA        | СТВ        | CTC        | CTC        |
|                                   |  | CTL   | CTM        | CTT        | CTV        | CVL        | CVT        | EAL        | EAM        | EAT        | ECL        |
|                                   |  | ECM   | ECT        | EGL        | EGM        | EGT        | ESL        | ESM        | EST        | ETA        | ETE        |
|                                   |  | ETC   | ETG        | ETL        | ETM        | ETT        | ETV        | EVL        | EVM        | EVT        | FAL        |
|                                   |  | FAM   | FAT        | FCL        | FCM        | FCT        | FGL        | FGM        | FGT        | FSL        | FSN        |
|                                   |  | FST   | FTA        | FTB        | FTC        | FTG        | FTL        | FTM        | FTT        | FTV        | FVI        |
| +4°C to +40°C                     | +4°C to +78°C  | FVM   | FVT        | GAL        | GAT        | GCL        | GCT        | GGL        | GGT        | GSL        | GS         |
| +40°F to +104°F                   | +40°F to +174°F                                      | GTA   | GTB        | GTC        | GTG        | GTL        | GTM        | GTT        | GTV        | GVL        | GV         |
|                                   |  | HAL   | HAM        | HAT        | HCL        | HCM        | HCT        | HGL        | HGM        | HGT        | HSL        |
|                                   |  | HSM   | HST        | HTA        | HTB        | HTC        | HTG        | HTL        | HTM        | HTT        | HT\        |
|                                   |  | HVL   | HVM        | HVT        | KAL        | KAM        | KAT        | KCL        | KCM        | KCT        | KGI        |
|                                   |  | KGM   | KGT        | KSL        | KSM        | KST        | KTA        | KTB        | KTC        | KTG        | KTI        |
|                                   |  | PGL   | PGT        | PSL        | RVL<br>PST | KVM<br>PTA | RVT<br>PTC | PAL<br>PTG | PAT        | PCL<br>PTT | PC<br>PT\  |
|                                   |  | PVL   | PVT        | SAL        | SAM        | SAT        | SCL        | SCM        | SCT        | SGL        | SGN        |
|                                   |  | SGT   | SSL        | SSM        | SST        | STA        | STB        | STC        | STG        | STL        | STN        |
|                                   |  | STT   | STV        | SVL        | SVM        | SVT        |            |            |            |            | 311        |
| -20°C to +40°C                    | -23°C to +66°C                                       | FAU   | FCU        | FSU        | FUA        | FUC        | FUU        | FUV        | FVU        | SAU        | SCL        |
| -4°F to +104°F                    | -9°F to +150°F                                       | SSU   | SUA        | SUC        | SUU        | SUV        | SVU        |            |            |            |            |
| -12°C to +35°C<br>+10°F to +95°F  | -12°C to +66°C<br>+10°F to +150°F                    | FGU   | FUG        | SGU        | SUG        |            |            |            |            |            |            |
|                                   |  | FTU   | FUL        | FUT        | PAU        | PCU        | PGU        | PSU        | PUA        | PUC        | PUC        |
| 0°C to +40°C                      | 0°C to +66°C   | PUU   | PUV        | PVU        | FTU        | FUL        | FUT        | PTU        | PUL        | PUT        | STU        |
| +32°F to +104°F                   | +32°F to +150°F                                      | SUL   | SUT        |            |            |            |            |            |            |            |            |

PZ15X-XXX-AXX (en) Page 5 of 16

#### **GENERAL PRODUCT SAFETY INFORMATION:**

- <u>AWARNING</u> EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.
- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.
- **► WARNING** Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.
- In the event of a diaphragm rupture material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 3/4" minimum ID hose between the pump and the muffler.
- **★WARNING** HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.
- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- MARNING HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.
- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- ▲ WARNING EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be usedwith 1, 1, 1 Trichloroethane, Methylene Chloride or other Halogenated Hydrocarbon solvents which may react and explode.

#### **GENERAL DESCRIPTION**

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options are available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and a positive fluid pressure in the fluid chambers, ball checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

#### **AIR AND LUBE REQUIREMENTS**

- Filtered and oiled air will allow the pump to operate more efficiently and yield a longer life to operating parts and mechanisms.

- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- **MARNING** MISAPPLICATION HAZARD. Do not use models containing aluminum wetted parts with food products for human consumption. Plated parts can contain trace amounts of lead.
- ▲ CAUTION Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- ▲ CAUTION Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- <u>↑ CAUTION</u> Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods of time.
- Dry running of the pump is acceptable provided that the cycles accumulated do not exceed the application specific maintenance interval.
- Disconnect air line from pump when system sits idle for long periods of time.
- NOTICE Replacement warning labels are available upon request: "Static Spark and Diaphragm Rupture" pn 94080.
- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the Nitrile "O" rings in the air motor section of the pump.

#### TRANSPORT AND STORAGE

- Store in a dry place, do not remove product from box during storage.
- Do not remove protection caps from inlet and outlet prior to installation.
- Do not drop or damage box, handle with care.

## **INSTALLATION**

- Pump cycle rate and operating pressure should be controlled by using an air regulator on the air supply.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.

Page 6 of 16 PZ15X-XXX-XXX-AXX (en)

- Use flexible connections (such as hose), at the suction and discharge, these connections should not be rigid piped and must be compatible with the material being pumped.
- Pipe exhaust away to a safe location. Use a suitable diameter grounded hose between pump and muffler. Refer to table for proper size.

| Pump Series        | 1-1/2" |
|--------------------|--------|
| Hose Size (min ID) | 3/4"   |

- Install a ground wire where applicable.
- Verify correct model / configuration prior to installation.
- Pumps are tested in water at assembly. Flush pump with compatible fluid prior to installation.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a "Check Valve" be installed at the air inlet.
- Flooded suction inlet pressure must not exceed 10 psig (0.69 bar).
- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped will solidify when not in use for a period of time.

## **OPERATING INSTRUCTIONS**

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply, but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a "check valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

#### **MAINTENANCE**

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include the pump in preventive maintenance program.
- Service kits are available to service two separate diaphragm pump functions: 1. AIR SECTION, 2. FLUID SEC-TION. The Fluid Section is divided further to match typical part Material Options.
- Before disassembling, empty captured material in the outlet manifold by turning the pump upside down to drain material from the pump.

### **DIAPHRAGM PUMP SERVICE**

#### **GENERAL SERVICE NOTES:**

- Inspect and replace old parts with new parts as necessary. Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
- Tools needed to complete disassembly and repair:
  - 7/8" wrench, 1/2" socket or wrench, 3/8" socket or wrench, 3/8" Allen wrench, 10 mm Allen wrench, T-10 Torx screwdriver, torque wrench (measuring inch pounds), "O" ring pick.
- Keep good records of service activity and include pump in preventive maintenance program.
- USE ONLY GENUINE ARO REPLACEMENT PARTS TO AS-SURE PERFORMANCE AND PRESSURE RATING.
- Repairs should be made only by authorized trained personnel. Contact your local authorized ARO Service Center for parts and customer service information.

Original instructions are in English. Other languages are a translation of the original instructions.

#### PARTS AND SERVICE KITS

Refer to the part views and descriptions as provided on page 8 through 12 for parts identification and Service Kit information.

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Service kits are divided to service two separate diaphragm pump functions: 1. AIR SECTION, 2. FLUID SEC-TION. The FLUID SECTION is divided further to match typical part MATERIAL OPTIONS.

## **FLUID SECTION DISASSEMBLY**

- 1. Remove (61) outlet manifold and (60) inlet manifold.
- 2. Remove (22) balls, (19) "O" rings and (21) seats.
- 3. Remove (15) fluid caps.

**NOTE:** Only PTFE diaphragm models use a primary diaphragm (7) and a backup diaphragm (8).

4. Remove the (14) screw, (6) diaphragm washer, (7) or (7 / 8) diaphragms and (5) backup washer.

**NOTE:** Do not scratch or mar the surface of (1) diaphragm rod.

## **FLUID SECTION REASSEMBLY**

- Reassemble in reverse order. Refer to the torque requirements on page 10.
- Clean and inspect all parts. Replace worn or damaged parts with new parts as required.
- Lubricate (1) diaphragm rod and (144) "U" cup with Lubriplate® FML-2 grease (94276 grease packet is included in service kit).
- Be certain the diaphragm assembly bottoms out on the (1) rod, back off PTFE diaphragm assembly far enough to align holes.
- For models with PTFE diaphragms: Item(8) Santoprene diaphragm is installed with the side marked "AIR SIDE" towards the pump center body. Install the PTFE diaphragm (7) with the side marked "FLUID SIDE" towards the (15) fluid cap.
- Check torque settings after pump has been re-started and run a while.

• Lubriplate\* is a registered trademark of Lubriplate Division (Fiske Brothers Refining Company) • 271<sup>TM</sup> is a trademark of Henkel Loctite Corporation •

PZ15X-XXX-XXX (en) Page 7 of 16

Viton® is a registered trademarks of the Chemours Company \* Hytrel® is a registered trademark of the DuPont Company \*
 Loctite® and 242 are registered trademarks of the Henkel Loctite Corporation \* ARO® is a registered trademark of Ingersoll-Rand Company \*
 Santoprene® is a registered trademark of Celanese \*

## PARTS LIST / PZ15X-XXX-XXX-AXX FLUID SECTION

#### Fluid Section Service Kits (637375-XXX OR 637375-XX)

#### For Fluid Kits With Seats:

• 637375-XXX Fluid section service kit includes: Seats (see SEAT Option, refer to -XXX in chart below), Balls (see BALL Option, refer to -XXX in chart below), Diaphragms (see DIAPHRAGM Option, refer to -XXX in chart) and item 19, 70, 144, 175 and 180 (listed below) plus items 174 and 94276 Lubriplate® FML-2 grease (page 11).

#### For Fluid Kits Without Seats:

• 637375-XX Fluid section service kit includes: Balls (see BALL Option, refer to -XX in chart below), Diaphragms (see Diaphragm Option, refer to -XX in chart below) and item 19, 70, 144, 175 and 180 (listed below) plus items 174 and 94276 Lubriplate\* FML-2 grease (page 11).

|       | COMMON PARTS PZ15X-XXX-XXX-AXX     |       |     |          |  |  |  |  |
|-------|------------------------------------|-------|-----|----------|--|--|--|--|
| Item  | Description                        | [Mtl] | Qty | Part no  |  |  |  |  |
| 1     | Connecting Rod                     | [C]   | (1) | 97147    |  |  |  |  |
| 0070  | Gasket                             | [B]   | (2) | 95843    |  |  |  |  |
| 00144 | <b>"U" Cup</b> (3/16" x 1-1/4" OD) | [B]   | (2) | Y186-50  |  |  |  |  |
| 00175 | "O" Ring (3/32" x 13/16" OD)       | [B]   | (2) | Y325-114 |  |  |  |  |

| E    | EXTERNAL HARDWARE OPTIONS PZ15X-XXXX-XXX |      |          |          |                            |       |  |  |  |
|------|--|------|----------|----------|----------------------------|-------|--|--|--|
|      |  |      | PZ15X-XX | <u>P</u> | PZ15 <u>S</u> -XX <u>S</u> |       |  |  |  |
| Item | Description                              | Qty  | Part no  | [Mtl]    | Part no                    | [Mtl] |  |  |  |
| 26   | Screw (M10 x 1.5 - 6g x 30 mm)           | (8)  | 95884-1  | [C]      | 95884                      | [SS]  |  |  |  |
| 27   | <b>Bolt</b> (M8 x 1.25 - 6g x 40 mm)     | (20) | 95896-1  | [C]      | 95896                      | [SS]  |  |  |  |
|      | (M8 x 1.25 - 6g x 50 mm)                 | (20) |          |          |                            |       |  |  |  |
| 29   | Hex Flange Nut (M8 x 1.25 - 6h)          | (20) | 95879-1  | [C]      | 95879                      | [SS]  |  |  |  |

|      | MANIFOLD / FLUID CAP MATERIAL PZ15X-X <u>X</u> X-XXX-AXX |     |                    |       |           |       |                    |       |                    |       |
|------|--|-----|--------------------|-------|-----------|-------|--------------------|-------|--------------------|-------|
|      |  |     | PZ15X-X <u>A</u> X |       | PZ15X-XCX |       | PZ15X-X <u>S</u> X |       | PZ15X- <u>YS</u> X |       |
| Item | Description  | Qty | Part no            | [Mtl] | Part no   | [Mtl] | Part no            | [Mtl] | Part no            | [Mtl] |
| 5    | Backup Washer  | (2) | 95819-3            | [C]   | 95819-3   | [C]   | 95819-1            | [SS]  | 95819-1            | [SS]  |
| 6    | Diaphragm Washer   | (2) | 95819-3            | [C]   | 95819-3   | [C]   | 95819-1            | [SS]  | 95819-1            | [SS]  |
| 9    | Washer   | (2) | Y13-8-T            | [SS]  | Y13-8-T   | [SS]  | Y13-8-T            | [SS]  | Y13-8-T            | [SS]  |
| 14   | Screw (M14 x 2 - 6g x 45 mm)                             | (2) | 95883              | [SS]  | 95883     | [SS]  | 95883              | [SS]  | 95883              | [SS]  |
| 15   | Fluid Cap  | (2) | 95821              | [A]   | 95953     | [CI]  | 95890              | [SS]  | 95890              | [SS]  |
| 60   | Inlet Manifold   | (1) | 95828-[♦]          | [A]   | 95940-[♦] | [CI]  | 95900-[♦]          | [SS]  | 95943-�            | [SS]  |
| 61   | Outlet Manifold  | (1) | 95827-[♦]          | [A]   | 95937-[♦] | [CI]  | 95899-[♦]          | [SS]  | 95945-�            | [SS]  |
| 63   | Pipe Plug (1-1/2 NPT)                                    | (2) | Y17-127            | [A]   | Y17-57-S  | [SS]  | Y17-57-S           | [SS]  |                    |       |
| 03   | (R 1-1/2)  | (2) | 95902-2            | [A]   | 95902-1   | [SS]  | 95902-1            | [SS]  |                    |       |

|               | SEAT OPTIONS PZ15X-XXX-XXX-AXX |     |       |   |               |         |     |       |  |  |
|---------------|--------------------------------|-----|-------|---|---------------|---------|-----|-------|--|--|
|               | "21"                           |     |       |   |               |         |     |       |  |  |
| - <u>X</u> XX | Seat                           | Qty | [Mtl] | Г | - <u>X</u> XX | Seat    | Qty | [Mtl] |  |  |
| - <u>A</u> XX | 95825-A                        | (4) | [SP]  |   | - <u>G</u> XX | 95825-G | (4) | [B]   |  |  |
| - <u>C</u> XX | 95825-C                        | (4) | [H]   |   | - <u>H</u> XX | 95891   | (4) | [SH]  |  |  |
| - <u>E</u> XX | 95893                          | (4) | [C]   |   | - <u>S</u> XX | 95877   | (4) | [SS]  |  |  |
| - <u>F</u> XX | 95892                          | (4) | [A]   |   |               |         |     |       |  |  |

| BALL OPTIONS PZ15X-XXX-XXX-AXX |         |     |       |   |               |         |     |       |  |
|--------------------------------|---------|-----|-------|---|---------------|---------|-----|-------|--|
| <b>0</b> "22" (2" diameter)    |         |     |       |   |               |         |     |       |  |
| -X <u>X</u> X                  | Ball    | Qty | [Mtl] | ٦ | -X <u>X</u> X | Ball    | Qty | [Mtl] |  |
| -X <u>A</u> X                  | 95826-A | (4) | [SP]  |   | -X <u>T</u> X | 95826-4 | (4) | [T]   |  |
| -X <u>C</u> X                  | 95826-C | (4) | [H]   | Ì | -X <u>V</u> X | 95826-3 | (4) | [V]   |  |
| -X <u>G</u> X                  | 95826-2 | (4) | [B]   |   |               |         |     |       |  |
| -XSX                           | 95878   | (4) | [SS]  |   |               |         |     |       |  |

- $\spadesuit$  For NPTF thread models (PZ15X-AXX-XXX), use "-1"
- ♦ For BSP thread models (PZ15X-BXX-XXX), use "-2"
- Flange models
- 2 Items included in air section service kit, see page 11.

Page 8 of 16 PZ15X-XXX-XXX-AXX (en)


## PARTS LIST / PZ15X-XXX-XXX-AXX FLUID SECTION

|              | DIAPHRAGM OPTIONS PZ15X-XXX-XX <u>X</u> -AXX        |  |   |     |       |           |         |            |          |     |       |
|--------------|---|--|---|-----|-------|-----------|---------|------------|----------|-----|-------|
|              | • Service Kit With Seat                             | • Service Kit Without Seat                         | <b>0 "7" 0</b> "8" <b>0</b> "19" (3/16" |     |       |           | 16" x 3 | 3-1/4" OD) |          |     |       |
| -XX <u>X</u> | -XXX = (Seat)<br>-XXX = (Ball)<br>-XXX= (Diaphragm) | - <u>X</u> X = (Ball)<br>-X <u>X</u> = (Diaphragm) | Diaphragm                               | Qty | [Mtl] | Diaphragm | Qty     | [Mtl]      | "O" Ring | Qty | [Mtl] |
| -XX <u>A</u> | 637375-XXA  | 637375-XA  | 96166-A                                 | (2) | [SP]  |           |         |            | 95992    | (4) | [E]   |
| -XX <u>C</u> | 637375-XXC  | 637375-XC  | 96166-C                                 | (2) | [H]   |           |         |            | Y327-233 | (4) | [V]   |
| -XX <u>G</u> | 637375-XXG  | 637375-XG  | 96329-2                                 | (2) | [B]   |           |         |            | Y325-233 | (4) | [B]   |
| -XXL         | 637375-XXL  | 637375-XL  | 96165-L                                 | (2) | [L]   | 96164-A   | (2)     | [SP]       | Y328-233 | (4) | [T]   |
| -XX <u>M</u> | 637375-XXM  | 637375-XM  | 96166-M                                 | (2) | [MSP] |           |         |            | Y328-233 | (4) | [T]   |
| -XX <u>T</u> | 637375-XXT  | 637375-XT  | 96165-T                                 | (2) | [T]   | 96164-A   | (2)     | [SP]       | Y328-233 | (4) | [T]   |
| -XX <u>V</u> | 637375-XXV  | 637375-XV  | 95820-3                                 | (2) | [V]   |           |         |            | Y327-233 | (4) | [V]   |

|      | CENTER SECTION OPTIONS PZ15X-XXX-XXX-AXX |     |                 |       |                 |       |  |  |  |
|------|--|-----|-----------------|-------|-----------------|-------|--|--|--|
|      |  |     | PZ15 <u>A</u> - | X     | PZ15 <u>S</u> - | -X    |  |  |  |
| Item | Description                              | Qty | Part no         | [Mtl] | Part no         | [Mtl] |  |  |  |
| 43   | Ground Lug                               | (1) | 93004           | [Co]  | 93004           | [Co]  |  |  |  |
| 68   | Air Cap                                  | (1) | 95822-3         | [A]   | 95889-3         | [SS]  |  |  |  |
| 69   | Air Cap                                  | (1) | 95822-4         | [A]   | 95889-4         | [SS]  |  |  |  |
| 74   | Pipe Plug (1/4 - 18 NPT x 7/16")         | (2) | Y17-51-S        | [SS]  | Y17-51-S        | [SS]  |  |  |  |
| 131  | Screw (M10 x 1.5 - 6g x 100 mm)          | (4) | 95934           | [C]   | 96657           | [SS]  |  |  |  |
| 180  | Washer (1-1/2 NPT)                       | (4) | 94098           | [Co]  | 94098           | [Co]  |  |  |  |
| 195  | Nut (M10 x 1.5 - 6h)                     | (4) | 93010           | [SS]  | 93010           | [SS]  |  |  |  |

PZ15X-XXX-XXX-AXX (en) Page 9 of 16

## PARTS LIST / PZ15X-XXX-XXX-AXX FLUID SECTION

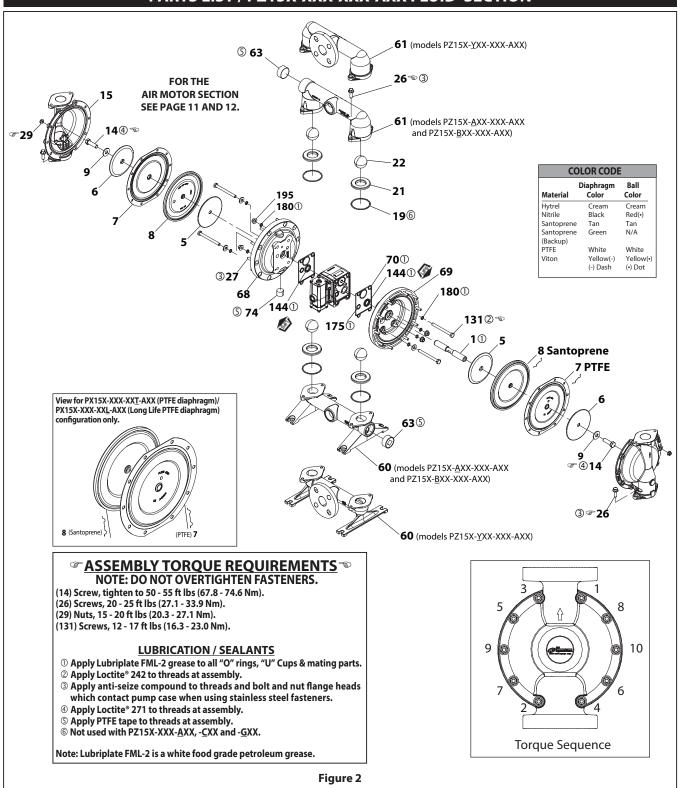

Page 10 of 16 PZ15X-XXX-XXX-AXX (en)

## PARTS LIST / PZ15X-XXX-XXX-AXX AIR SECTION PARTS

ltem

140

141

168

169

**€**171

€172

**€**173

**9**174

**©**166 Gasket

Description

Valve Insert

Valve Plate

170 Piston Sleeve

167 Pilot Piston (includes 168 and 169)

"O" Ring (3/32" x 5/8" OD)

**"U" Cup** (1/8" x 7/8" OD)

"O" Ring (3/32" x 1-1/8" OD)

"O" Ring (1/16" x 1-1/8" OD)

"O" Ring (3/32" x 1-3/8" OD)

**'O" Ring** (1/8" x 1/2" OD)

176 Diaphragm (check valve)

181 | Roll pin (5/32" OD x 1/2" long)

**ூ** Lubriplate FML-2 grease

**Lubriplate Grease Packets (10)** 

**9** Fluid Section Service Kit parts, See page 8 and 9.

❸ Indicates parts included in 637389 air section service kit shown below and items (70), (144), (175) and (180) shown on page 8 and 9.

| Item         | Description                              | Part no    | Qty | [Mtl] |
|--------------|--|------------|-----|-------|
| 101          | Center Body (PZ15 <u>A</u> -X)           | 97025      | (1) | [A]   |
| 101          | (PZ15 <u>S</u> -X)                       | 97034      | (1) | [SS]  |
| 103          | Bushing                                  | 97392      | (1) | [D]   |
| 105          | Screw (M6 x 1 - 6g ) (16 mm long)        | 95991      | (4) | [SS]  |
| 111          | Spool                                    | 95835      | (1) | [D]   |
| 118          | Actuator Pin                             | 95839      | (2) | [SS]  |
| 121          | Sleeve                                   | 95123      | (2) | [D]   |
| 126          | Plug                                     | Y17-13-S   | (1) | [SS]  |
| 128          | Pipe Plug (1/8 - 27 NPT x 0.27")         | Y17-50-S   | (1) | [SS]  |
| <b>⊚</b> 132 | Gasket                                   | 96170      | (1) | [B]   |
| 133          | Washer (1/4") (PZ15 <u>A</u> -X)         | Y117-416-C | (3) | [C]   |
| 133          | (1/4") (PZ15 <u>S</u> -X)                | Y14-416-T  | (3) | [SS]  |
| 134          | Screw (M6 x 1 - 6g x 20 mm)              | 95887      | (6) | [SS]  |
| 135          | Valve Block (PZ15 <u>A</u> -XXX-XXX-AXX) | 95942-1    | (1) | [Z]   |
| 133          | (PZ15 <u>S</u> -XXX-XXX-AXX)             | 95939-1    | (1) | [SS]  |
| 136          | End Cap (PZ15 <u>A</u> -X)               | 95941      | (1) | [Z]   |
| 130          | (PZ15 <u>S</u> -X)                       | 95938      | (1) | [SS]  |
| <b>©</b> 137 | Gasket                                   | 95844      | (1) | [B]   |
| €138         | <b>"U" Cup</b> (3/16" x 1-5/8" OD)       | Y186-53    | (1) | [B]   |
| €139         | <b>"U" Cup</b> (3/16" x 1-1/8" OD)       | Y186-49    | (1) | [B]   |

©200 Gasket

201 Muffler

**@233** Adapter Plate

# Service is divided into two parts - 1. Pilot Valve, 2. Major Valve. GENERAL REASSEMBLY NOTES:

AIR MOTOR SECTION SERVICE

- Air Motor Section Service is continued from Fluid Section repair.
- Inspect and replace old parts with new parts as necessary. Look for deep scratches on surfaces, and nicks or cuts in "O" rings.
- Take precautions to prevent cutting "O" rings upon installation.
- Lubricate "O" rings with Lubriplate FML-2 grease.
- Do not over-tighten fasteners, refer to torque specification block on view.
- Torque fasteners following restart.
- SERVICE TOOLS To aid in the installation of (168) "O" rings onto the (167) pilot piston, use tool # 204130-T, available from ARO.

### PILOT VALVE DISASSEMBLY

- 1. A light tapping on (118) should expose the opposite (121) sleeve, (167) pilot piston and other parts.
- Remove (170) sleeve, inspect inner bore of sleeve for damage.

## **PILOT VALVE REASSEMBLY**

- 1. Clean and lubricate parts not being replaced from service kit.
- 2. Install new (171 and 172) "O" rings, replace (170) sleeve.
- 3. Install new (168) "O" rings and (169) seal **NOTE:** The lip direction. Lubricate and replace (167).
- Reassemble remaining parts, replace (173 and 174) "O" rings.

Remove (135) valve block and (233) adapter plate, exposing (132 and 166) gaskets and (176) check valve.

Part no

95838

95837

96171

67164

94433

Y240-9

94081

Y325-119

Y325-22

Y325-123

Y325-202

Y178-52-S

95845

96172

95832

94276

637308

350-568

[Mtl]

[B]

(1) [D]

[B]

Qty

(1) [AO]

(1) [AO]

(1)

(1) D

(2) [U]

(1) [B]

(1) [B]

(1) [B]

(2) [B]

(2)

(2) U

(4) [SS]

(1) [B]

(1)

(1) [P]

(1)

- 2. Insert a small flat blade screwdriver into the notch in the side of (135) valve block and push in on tab to remove (233) adapter plate, releasing (140) valve insert, (141) valve plate and (200) gasket.
- 3. Remove (136) end cap and (137) gasket, releasing (111) spool.


#### **MAJOR VALVE REASSEMBLY**

- Install new (138 and 139) "U" cups on (111) spool LIPS MUST FACE EACH OTHER.
- 2. Insert (111) spool into (135) valve block.
- 3. Install (137) gasket on (136) end cap and assemble end cap to (135) valve block, securing with (105) screws.
- 4. Install (140) valve insert and (141) valve plate into (135) valve block. **NOTE:** Assemble (140) valve insert with "dished" side toward (141) valve plate. Assemble (141) valve plate with part number identification toward (140) valve insert.
- 5. Assemble (200) gasket and (233) adapter plate to (135) valve block. **NOTE:** Assemble (233) adapter plate with notched side down.
- 6. Assemble (132 and 166) gaskets and (176) check valve to (101) body.
- 7. Assemble (135) valve block and components to (101) body, securing with (134) screws.

|     | MATERIAL CODE |   |               |      |   |                 |  |  |
|-----|---------------|---|---------------|------|---|-----------------|--|--|
| [A] |               |   | Aluminum      | [P]  | = | Polypropylene   |  |  |
| [AO | ]             | = | Alumina Oxide | [SP] | = | Santoprene      |  |  |
| [B] |               | = | Nitrile       | [SS] | = | Stainless Steel |  |  |
| [C] |               | = | Carbon Steel  | [U]  | = | Polyurethane    |  |  |
| [D] |               | = | Acetal        | [Z]  | = | Zinc            |  |  |

PZ15X-XXX-XXX-AXX (en) Page 11 of 16

## PARTS LIST / PZ15X-XXX-XXX-AXX AIR SECTION

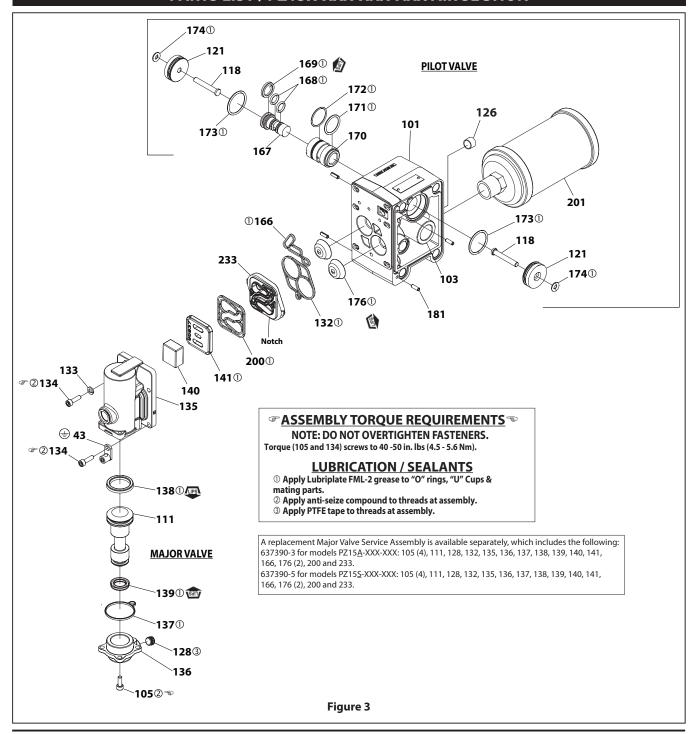

## **TROUBLESHOOTING**

## Product discharged from air exhaust.

- Check for diaphragm rupture.
- Check tightness of (14) diaphragm screw.

#### Air bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and inlet side fluid caps.
- Check tightness of (14) diaphragm screw.

#### Motor blows air or stalls.


- Check (176) check valve for damage or wear.
- Check for restrictions in valve / exhaust.

#### Low output volume.

- Check air supply.
- Check for plugged outlet hose.
- Check for kinked (restrictive) outlet material hose.
- Check for kinked (restrictive) or collapsed inlet material hose.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be a non-collapsing type, capable of pulling a high vacuum.
- Check all joints on the inlet manifolds and suction connections. These must be air tight.
- Inspect the pump for solid objects lodged in the diaphragm chamber or the seat area.

Page 12 of 16 PZ15X-XXX-XXX-AXX (en)

### **DIMENSIONAL DATA**

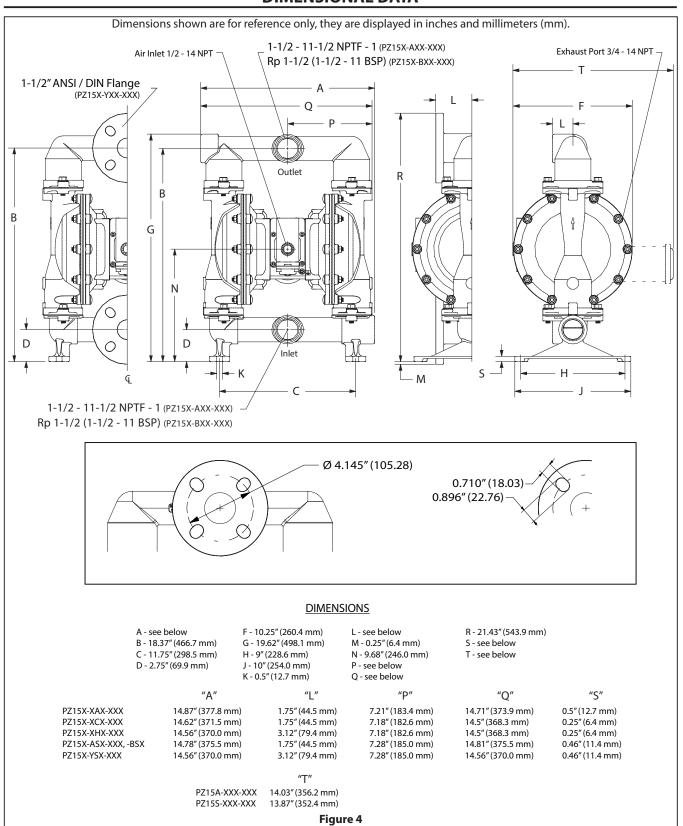

PZ15X-XXX-XXX (en) Page 13 of 16

## **DECLARATION OF CONFORMITY**

MANUFACTURED BY: INGERSOLL RAND INC

USA: 209 N. MAIN STREET, BRYAN, OHIO 43506 **EU: 165 LAKEVIEW DRIVE, SWORDS, IRELAND** 



**DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE:** 

TYPE / SERIES: AIR OPERATED DIAPHRAGM PUMPS

MODEL: PZ05X-XXX-XXX, PZ10X-XXX-XXX, PZ15X-XXX-XXX, PZ20X-XXX-XXX, PZ30X-XXX-XXX.

**SERIAL NO. RANGE:** (2022 - 2025) ()A2XX2-XXXX ⇒ ()L2XX5-XXXX

This product complies with the following European Community Directives:

2006/42/EC (Machinery), 2014/34/EU, 1999/92/EC, 1907/2006/EC, 2011/65/EU

The following Standards were used to verify compliance with the Directives:

EN ISO 80079-36:2016, EN ISO 80079-37:2016, EN IEC 60079-0:2018, EN ISO 12100:2010

**Standards Applied Marking:** 

(Ex) II 1 G Ex h IIC T4 Ga TX

II 1 D Ex h IIIC 135℃ Da TX

TX - for ambient temperature see certificate ERO21ATEX0012X and page 5 of the operator's manual

Name of Notified Body: Element Materials Technology Notified Body Number: 2812

Approved by:

Willem Kuvvenhoven, Global Engineering Leader

aus Ropali

Thomas Mapelli, Application Sales Engineer & Authorized Manufacturer Representative

DOC-5

## **DECLARATION OF CONFORMITY**

MANUFACTURED BY: INGERSOLL RAND INC

USA: 209 N. MAIN STREET, BRYAN, OHIO 43506 **EU: 165 LAKEVIEW DRIVE, SWORDS, IRELAND** 

**Date: 15 APRIL 2023** 

**DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE:** 

**TYPE / SERIES:** AIR OPERATED DIAPHRAGM PUMPS

**MODEL:** PZ05X-XXX-XXX, PZ10X-XXX-XXX, PZ15X-XXX-XXX, PZ20X-XXX-XXX, PZ30X-XXX-XXX.

**SERIAL NO. RANGE:** (2022 - 2025) ()A2XX2-XXXX ⇒ ()L2XX5-XXXX

This product complies with the following UK Regulations and European Community Directives:

Supply of Machinery (Safety) Regulations 2008 (SI 2008/1597), The Equipment and Protective Systems Intended for Use in potentially Explosive Atmospheres Regulations: 2016 (SI 2016/1107), 1999/92/EC, 1907/2006/EC, 2011/65/EU

The following Standards were used to verify compliance with the Directives:

EN ISO 80079-36:2016, EN ISO 80079-37:2016, EN IEC 60079-0:2018, EN ISO 12100:2010

**Standards Applied Marking:** 

🖭 II 1 G Ex h IIC T4 Ga TX II 1 D Ex h IIIC 135°C Da TX TX - for ambient temperature see certificate EMA21UKEX0070X and page 5 of the operator's manual

Name of Approved Body: Element Materials Technology

Approved Body Number: 0891

Approved by:

Willem Kuyvenhoven, Global Engineering Leader

Thomas Mapelli, Application Sales Engineer & **Authorized Manufacturer Representative** 

DOC-6

**Date: 15 APRIL 2023** 

PZ15X-XXX-XXX-AXX (en) Page 14 of 16

PZ15X-XXX-XXX (en) Page 15 of 16



Page 16 of 16 PZ15X-XXX-XXX-AXX (en)